
 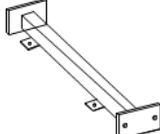

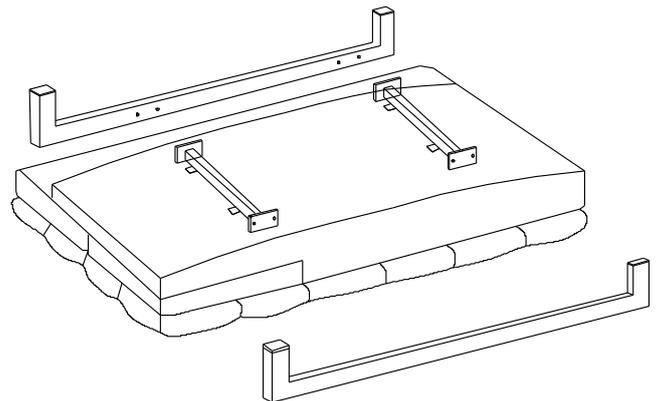
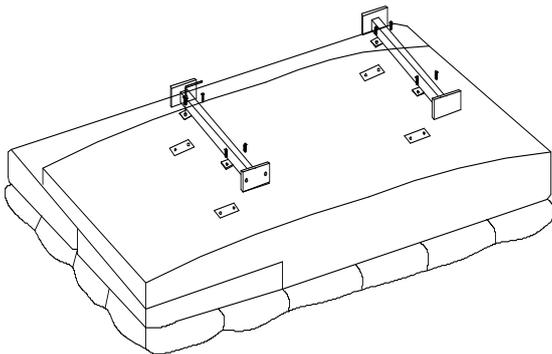
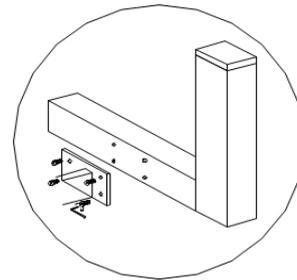


ASSEMBLY INSTRUCTION MODEL: SLUMBA SOFA BED

Parts List

A		Allen Key X 1
B		Bolt X 24
C		Base support bar x 2
D		U Shape leg frame x 2

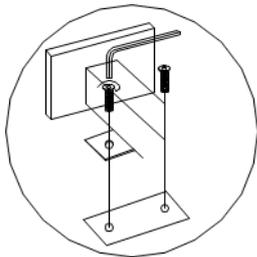

1. With the help of another person place sofa upside down on a soft clean surface. As indicated in diagram place base support bar over (C) holes in base of sofa. Then by hand take bolt (B) insert into hole ensure to properly seat screw (turn 3 times) then repeat for all holes. Do not tighten till U shape leg is fitted.
2. Take U Shape Leg frame (D) with holes facing toward sofa line up threaded holes in frame with holes in base support bar, with bolt (B) hand fit screws turn 2-3 turns once seated properly repeat for all bolts. Once all bolt seated take allen key (A) start to tighten bolts on base of sofa then bolts on U shape leg.
3. When all bolts are tight with help of another person lift completed sofa and place on feet ready for use.

= Furniture Solutions =

OPERATING INSTRUCTIONS MODEL: SLUMBA SOFA BED

Click Clack Bed operation on a 3-stage ratchets system.

Starting from flat position

Step 1: Lift back till you hear a click that will hold at mid angle, to increase to full upright position pull back forward again till you hear a click that will hold at full upright position.

Starting from full upright position

Step 2: Pull back towards front till you hear a clack that will release the lock on ratchets system, once released with your assistance lower back till flat. Note once lock is released back will only go to flat position if you require it to go to mid angle position you will need to start from flat position as instructed above.

Click Clack operation for Chaise back on a 3-stage ratchets system

Starting from flat position

Step 1: Lift back till you hear a click that will hold at mid angle, to increase to full upright position pull back forward again till you hear a click that will hold at full upright position.

Starting from full upright position

Step 2: Pull back towards front till you hear a clack that will release the lock on ratchets system, once released with your assistance lower back till flat. Note once lock is released back will only go to flat position if you require it to go to mid angle position you will need to start from flat position as instructed above.

Warning

- 1. Do not operate Chaise TV action when sofa back is in upright position.**
- 2. Do not operate when in use IE: person laying a sofa, loose blankets & or Cushions that could get caught in mechanism.**
- 3. Never drag sofa always lift with help of another person**

