

Furniture Solutions (Aust) Pty Ltd

10-16 Daisy St,

Revesby, NSW. 2212

www.furnitureolutions.com.au

INSTRUCTION MANUAL

PRODUCT: BELBORA 5PC LOUNGE,
CASUAL DINING SETTING

ITEM CODE: 16BELLDP


MADE IN CHINA

Please retain these pages as they contain tips to maximize the lifetime of your furniture with a measured effort.

Properly caring for your furniture can help ensure that it looks great year after year.

Important Notice: While every effort is made to use quality materials our products are limited in design for domestic use only & are not suitable for commercial use.


Belbora 5Pc Casual Dining

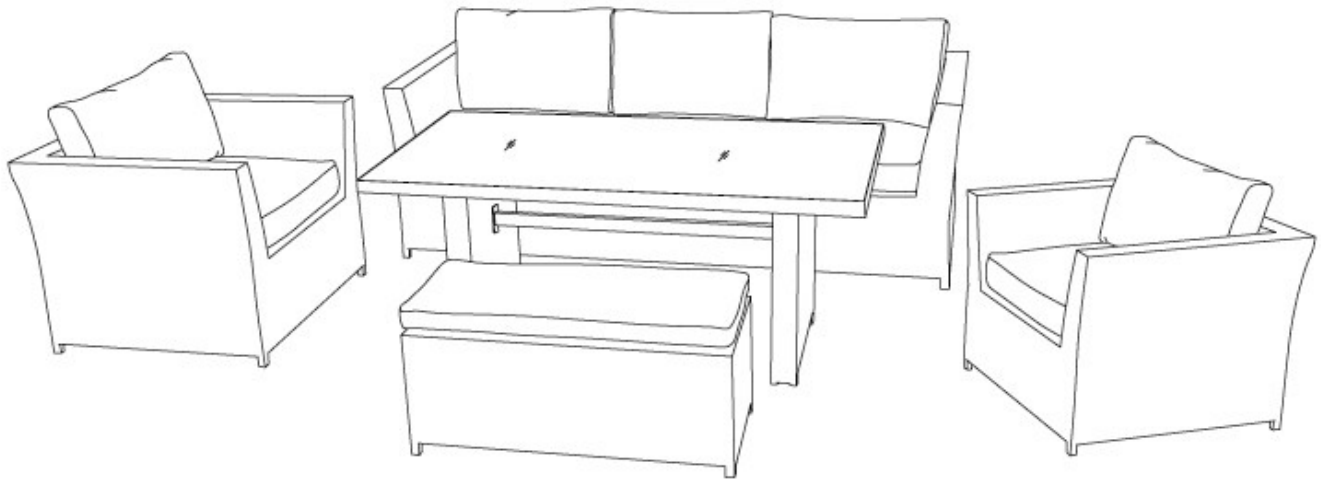


PRE ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly
5. Keep all hardware parts and packaging out of reach of small children
6. Do not over tighten the screws and bolts as this may damage the threads

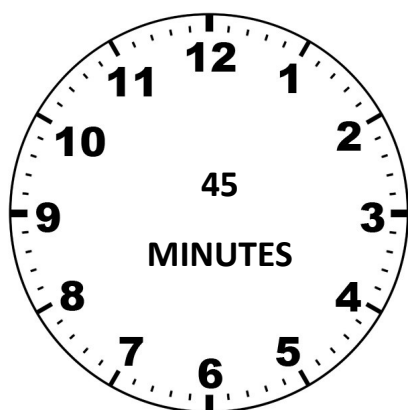

ALLOW TIME

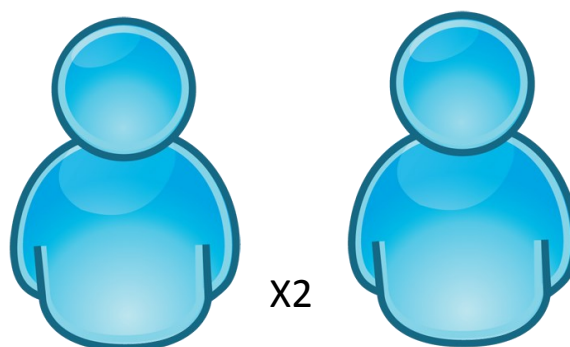

PEOPLE REQUIRED





For any assistance with assembly or missing parts please contact:

Place of purchase or Furniture Solutions on below





Customer Service (Australia) Phone– 1300794 188

Email– customerservice@furnituresolutions.com.au

Component List Dining Table

A Table Rim		X1
B Pedestal Leg		X 2
C Table Brace		X 1
D Table Glass Panel		X 1

Parts List Dining Table

E Bolts M6-20mm		X 12
F Flat Washer M6		X 12
G Blot Cover Caps		X 12
H Tool Allen Key M6-4mm		X 1

DINING TABLE


ASSEMBLY STEP 1 : Fit "Table Brace" to "Pedestal Legs".

You will require a second person to assist throughout entire procedure.

As indicated in below diagram place pedestal leg [B] upside down.

While second person holds pedestal leg upright. Aline holes on end of table brace [C] as indicated in diagram with threaded holes in pedestal leg.

To attach table brace & pedestal leg, by hand take bolt [E] together with washer [F] insert end of bolt into threaded hole ensure to seat properly before turning 2-3 times so thread catches and will hold in position. Note do not tighten at this point. Repeat for second bolt. While second person holds the 2 pieces, take second pedestal leg and fit table brace in same manner as previously instructed. Note do not tighten bolts at this stage. Go to Step 2

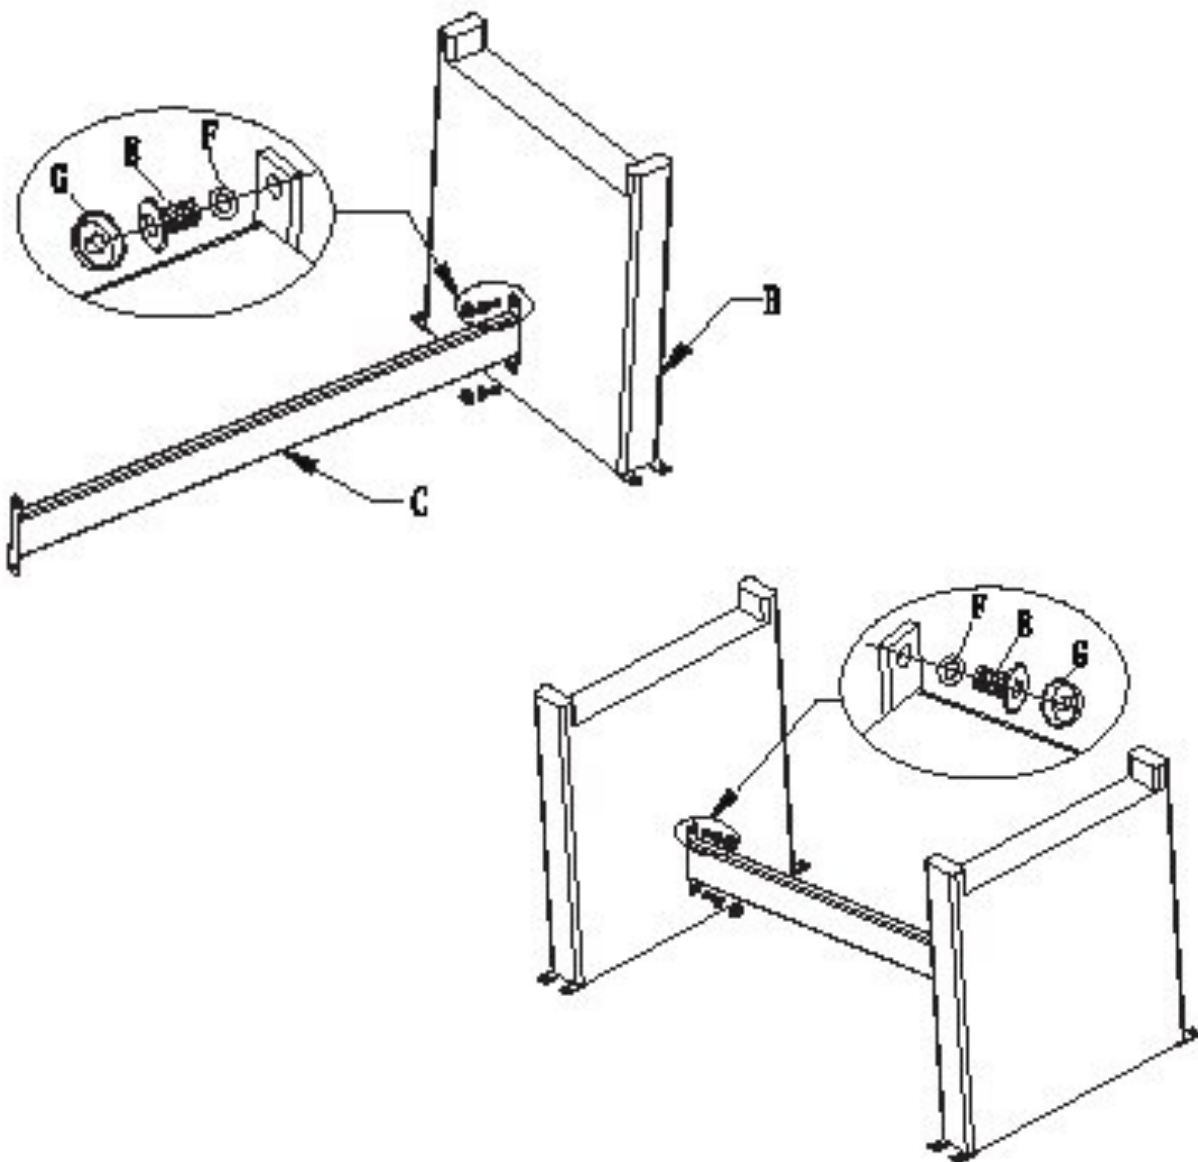

DINING TABLE


ASSEMBLY – STEP 2: FIT LEG PEDESTAL/BRACE COMPONENT TO “TABLE RIM”.

Lay Table Rim [A] flat upside down as indicated in diagram below.

With the help of a second person in unison lift assembled components “pedestal & brace” place as indicated in diagram, align holes in pedestal with threaded holes in table rim. Then by hand take bolt & washer [E+F] insert thru hole into threaded hole, ensure to seat thread properly and by hand turn 2-3 times so that thread has proper grip. Repeat for other side of pedestal. Repeat for other pedestal. Once all bolts are attached, have second person hold pedestal in position ensure that pedestal is in correct square position before you tighten bolts.

Take Tool [H] insert into end of bolt rotate in clockwise direction till bolt is firm do not overtighten as this can cause damage to threads, repeat for all bolts in table rim, then take tool and tighten bolts in pedestal leg, repeat till bolts are tightened. Next take bolt cover caps [G] and push onto ends of bolts.



Go to step 3.

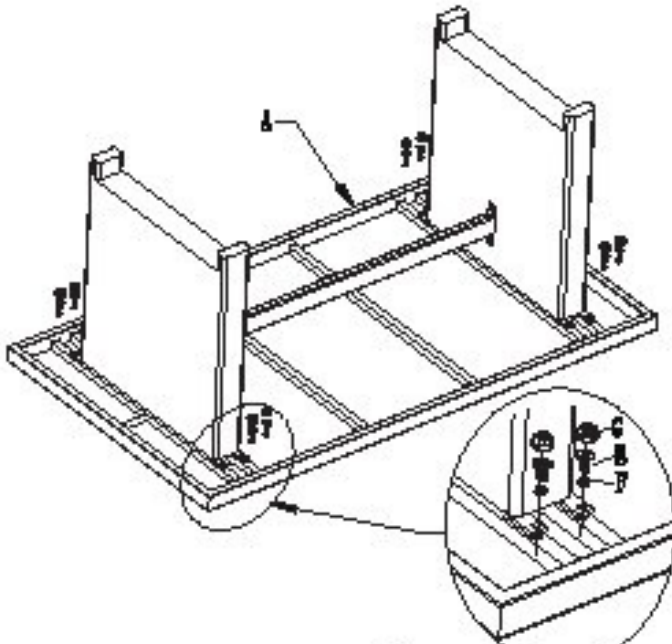

DINING TABLE


ASSEMBLY – STEP 3: FIT TABLE GLASS PANEL

With help of another person lift (do not roll) rotate and place assembled table onto feet as indicated in diagram below. Ensure that surface is impediment free and clean. With the help of another person lift table glass panel [D] and place squarely onto table rim, move and adjust so that no glass is overhanging table rim. Assembly now complete.

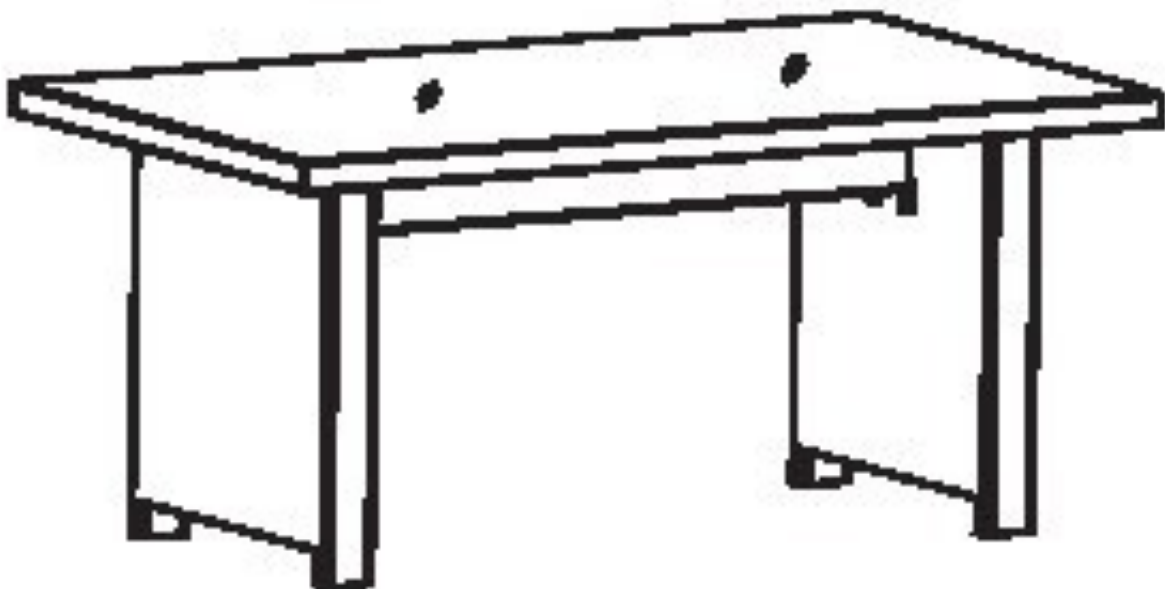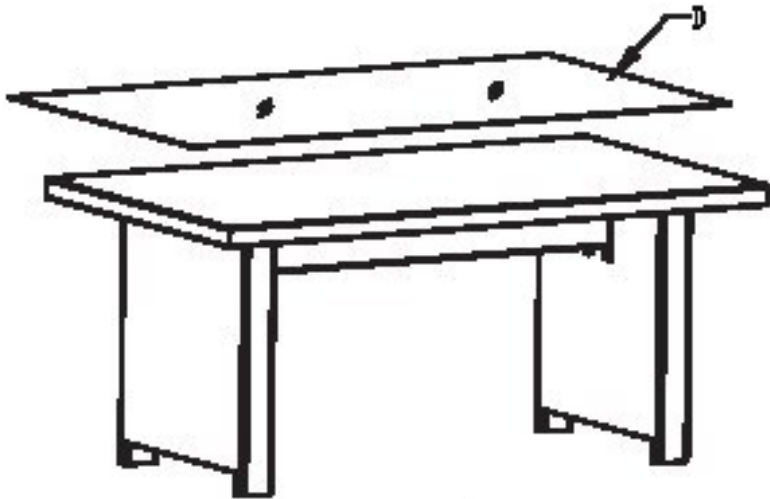

LOUNGE COMPONENT LIST

NO ASSEMBLY REQUIRED-JUST UNWRAP AND PLACE CUSHIONS

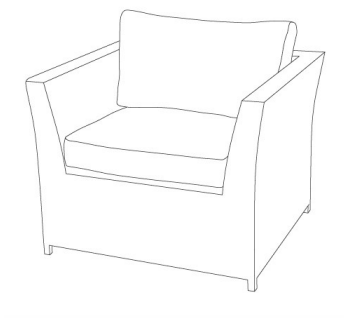


Armchair Backrest cushion	Top 690mm wide Base 640mm wide Height 380mm	Note: Not interchangeable
Armchair Seat Cushion	590mm wide 630mm deep 90mm thick	Note: Interchangeable with sofa



Sofa 3 seater Backrest cushion Left and Right	Top 630mm wide Base 600mm wide Height 380mm	Note: Interchangeable for left or right hand side of sofa
Sofa 3 Seater Backrest Cushion Middle of sofa	Top 590mm wide Base 590mm wide Height 380mm	Note: Not Interchangeable
Sofa 3 Seater Seat Cushion	590mm wide 630mm deep 90mm thick	Note: Interchangeable with armchair

Bench Seat Cushion	870mm long 380mm deep 400mm thick	Note: Not Interchangeable
-----------------------	---	------------------------------

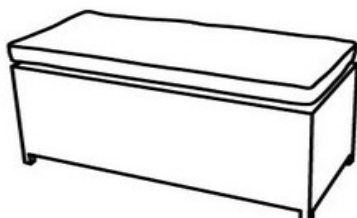

PRODUCT CARE & MAINTENANCE

Fabric Information

Fabrics used in outdoor product are not made of any special type of material, they do however use blends of common materials such as polyester, olefin & acrylic which perform best for intended purpose. These fabrics are not impervious to fading or mould, ensure cushions are always dry and put away when not in use.

Fabric Maintenance

It is important to keep fabric free of dust and or debris. Please vacuum at least every 2-3 weeks. Spot cleaning warm water & soft soap solution, sponge onto affected area till clean rinse area with clean sponge, pat dry with a soft clean cloth. Stubborn stains may be removed with fabric cleaner or if available steam cleaning is ok providing covers are left on filling and on gentle setting. Note do not use solvents, do not machine wash, do not tumble dry.

Synthetic Wicker Fibre Information

Synthetic Wicker fibre (commonly referred to as resin wicker) is made of polyethylene combined with colour & UV stabilizer. While the UV stabilizer adds to the life of the synthetic fibre, the effectiveness of stabilizer diminishes with age. Longevity of use cannot be judge as environmental conditions and are too varied to set a standard. Protection from the harsh outdoor conditions (I.e. Sunlight, pollution) is best for a longer period of use.

Synthetic Wicker Fibre Maintenance

Use a bucket filled with warm water & a soft soap, sponge over fibre till clean once clean rinse off with a hose, pat dry with a soft clean cloth before use. Every 4-6 weeks.

Glass Maintenance

Glass used is tempered for your safety;

To avoid scratching surface always use table cloths, placemats & coasters.

Keep dust & debris free, clean glass with a soft clean cloth.

Use of normal glass cleaning product is permissible. But care should be taken not to leave cleaning liquid on wicker or paint finish. Please rinse surrounding areas with clean water to avoid damage to wicker or paint on aluminium frame, ensure to pat dry with a soft clean cloth.

CARE AND MAINTENANCE CONTINUED

Internal Aluminium Frame Information

The majority of frames are mainly produced from aluminium, with the main benefit being a light weight product for easier use. Some designs require steel to be used in certain sections for added strength. While aluminium is rust resistant, bare metal can show signs of oxidation (red film) this does not constitute rust. Simply you are able to wipe or sand surface to remove oxidation mark.

Note you will need to touch up affected area with paint to stop from reoccurring. Steel itself has a lower resistance to elements than aluminium and will show signs of rust as it ages. Limited exposure & maintenance are best solutions for adding life to any furniture used in outside areas.

Internal Aluminium Frame Maintenance

The underside section of lounges can be a haven for loose debris, bugs and spiders.

Please remove all cushions place them in a safe location, then on a soft level surface turn over furniture onto back or arms. Note avoid dragging furniture in this position. Do a visual check for insects before you put hands or arms into void. Take a feather duster or similar wipe over frame work then proceed as below.

Use a bucket filled with warm water & a soft soap, sponge over frame till clean, once clean rinse off with a hose, pat dry with a soft clean cloth before use. Every 4-6 weeks.

Note when cleaning if you find scratches in paint please cover with a paint to prevent oxidation.

Cushions

Rotate cushion if possible to share the wear, take in cushions when not in use & stored in a dry area. Should cushions get wet, please hang over chair frame to drip dry completely before using or storing. Cushion and sling fabric fading resulting from general wear and tear or from a failure to comply with these care and maintenance instructions are not covered under the warranty.

Mould & mildew of cushions & slings is caused through atmospheric conditions, such as damp or poorly ventilated areas please check regularly for dampness.

WARNING SAFETY & ADVICE

Please be aware materials used in your furniture are not impervious to neglect, acts of god, abuse, alcohol spills, improper use of chemicals such as bleach or any solvent based product, products are limited in design for residential use only and not suitable for commercial use.

Please be aware that heat generated from barbeques and heaters will have an adverse effect on your furniture do not place furniture in close proximity to heat sources.

When moving tables, chairs, sofas or bench's always lift off the floor never drag. Most tables would require a 2 person lift doing so benefits yourself and furniture as dragging may cause damage to furniture and or surface on flooring.

Do not stand on furniture for your own safety & for the sake of the furniture

Never strike glass

Never drag or lean back chair, sofa, benchers whilst sitting on them

Tables, chairs, sofas & benches are not work benchers please only use as intended.

Fitting; bolts, nuts & screws should be checked periodically to ensure they are still firm. Note do not over tighten.

Please secure furniture during in climatic weather, as lightweight aluminium can become a projectile

Please be aware of staining fabric; Suntan oil, alcohol, juices & other chemical may do permanent damage to your covering, should be cleaned immediately

General wear & tear on cushions, please rotate cushions were possible as filling will soften with use, replacement cushion fillings can be purchased from local upholster if required in the future.

General wear & tear fabrics, most synthetic fabric resist pilling but pilling can occur from transference from other fabric that come in contact with material IE: Cotton clothing & or towels.

Mould can be very destructive to fabric, even in a fully covered entertaining area, moisture in the air can cling to fabric and if does not dry mould can grow. Check you cushion regularly for dampness or even better store cushion in a dry place when not in use.

Outdoor furniture can be a haven for debris, bugs & spiders. Please follow care advise.

Do not allow children to play under tables.

In summary outdoor furniture products require care to provide you with many years of use. Best results are to combine maintenance and protection from environment. To help reduce amount care required the use of an outdoor cover can give you better result with least amount of effort. Ensure that cover is adequate for use against moisture build up.

Warranty Details

1 Year Warranty

A one (1) year warranty applies to product against any defect associated with faulty workmanship for a period of (1) year from date of purchase.

Extended Warranty of (1) year total of (2) years applies to aluminum frame, welds & resin wicker against any defect associated with faulty workmanship from date of purchase.

Furniture Solutions accepts no responsibility for defects caused by incorrect assembly, mishandling, acts of god, general wear & tear, stains from spills/vegetation, chipping/scratching, exposure to extreme heat/cold, mould/mildew, hardware corrosion, misuse of the products & defects caused by failure in duty of care for the product in accordance with the care instructions. Warranty only extends to original purchaser and is not transferable, except when given as a gift.

Duty of care:

While every attempt is made to supply product using quality components there is always a need from consumer to help ensure a long life of use for product.

*Proper use of item, only what it is designed to do

*Regular maintenance and cleaning

*Assistance in protecting product from harsh elements IE: Pollution, Excessive heat & moisture

To extend the life of your outdoor furniture we recommend the following furniture covers should be used on furniture which is used in areas not protected from elements. Caution should be used when using oils, lotions & other chemicals such as chlorine.

Instruction Manual – Have been written to suit individual materials used in construction, please retain for future use for duty of care, assembly, parts & component sizing.

Claim management:

To make a warranty claim, customers can either contact the retailer where the purchase was made or Furniture Solutions on contact details below. Proof of purchase will be required before proceeding with any claim. In the case of product defects providing photos may be able to speed up processing of the claim. If missing parts please refer to assembly instructions for identification of said part and contact either of the above.

“Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure”.