 


**INSTRUCTION MANUAL  
VALERA LOUNGE ARM CHAIR  
ITEM CODE: 18VALM1S.T**

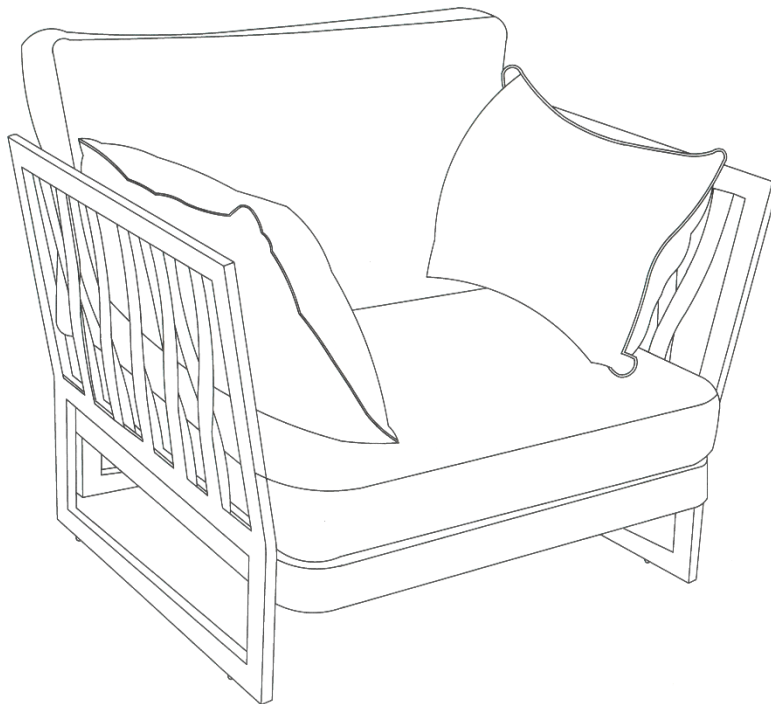


Imported by Furniture Solutions (Aust) Pty Ltd New South Wales, Australia.  
For any assistance with assembly or for missing parts please contact:  
Place of purchase or Furniture Solutions on below  
Customer Service (Australia) Phone-1300 794 188  
Email- [customerservice@furnitureolutions.com.au](mailto:customerservice@furnitureolutions.com.au)


## PRE-ASSEMBLY PREPARATION
 
### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

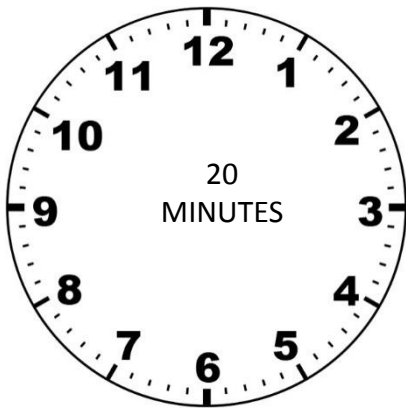


ALLOW TIME

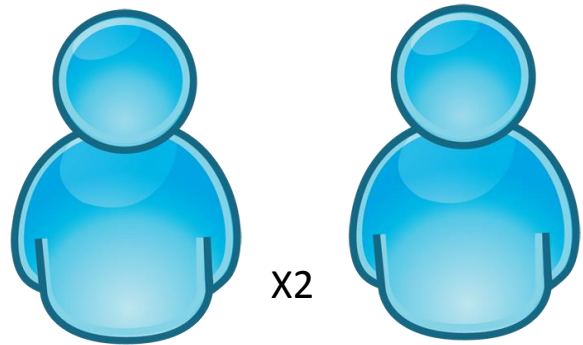 

PEOPLE REQUIRED

# PARTS LIST - ASSEMBLY INSTRUCTIONS

 Back frame	3	P.10589.B
Seat Frame	1	P.10589.S
Bolt-M6X20	12	P.10589.HW
Washer-M6	12	P.10589.HW
Tool	1	P.10589.HW

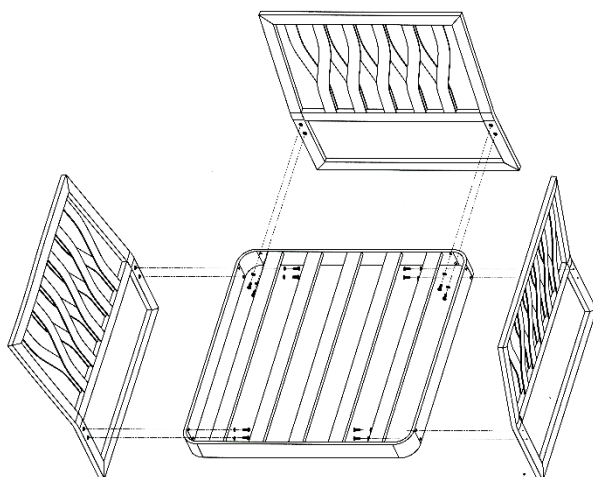

Please prepare work area as instructed in page 2:

## To Assemble Armchair:

 
Foreword: Main aim in assembly of this product is to have it level and to save you undoing bolts to correct level. Do not tighten any bolts until all bolts are fitted.

Please note 3 sides of the seat frame have holes drill completely thru frame, these holes will aline with back frames which have thread holes. With help from a second person aline back frame thread holes with hole in seat frame, take bolt together washer insert thru hole in seat frame and into threaded hole in back frame. To seat bolt correct by hand turn bolt 2-3 times until bolt has gripped. To test pull back gently on bolt. Fit remaining three bolts, once all bolts are seated in thread correctly you may by hand continue to thread bolt in.

**DO NOT TIGHTEN FULLY.**

This function is to stabilize product before you continue in same manner and fit the other two (2) back frames. Once all twelve (12) bolts are fitted ensure frame is on a level surface, now take tool provided and start to tighten bolts. One bolt each backrest and rotate around until complete. Warning do not over tighten as you may cause damage to threads. Assembly Complete.

## COMPONENTS LIST

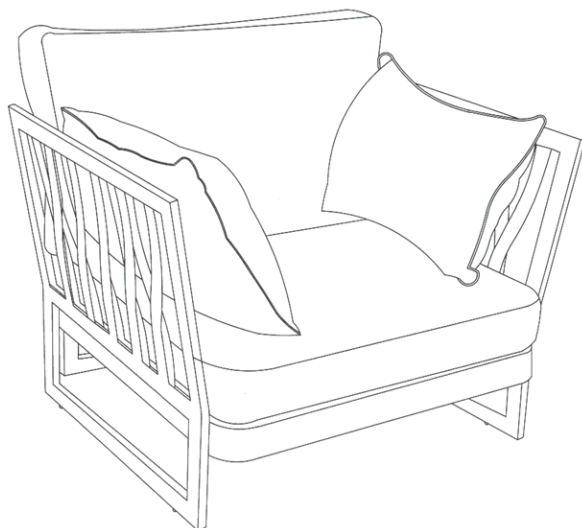

10589

P.10589.BR Backrest Cushion	W97.9>81xH47cm 12cm Thick Wall
P.10589.SC Seat Cushion	W81xD81cm 10cm Thick Wall
P.10589.P Pillow	W60XH45cm 12cm Tapering down

## CARE AND MAINTENANCE

Varieties of materials are used in construction of “Outdoor” furniture range. All will require some form of maintenance to extend the life of finishes and general appearance. Please see below instruction unique to your chosen product.

### ***Valera Construction;***

Aluminium Frame:

Tempered Glass: With textured

Acrylic Fabric:

### ***Powder Coated Aluminium;***

Powder coating is similar to a painted finish, the metal is coated with a paint powder then is past thru a kiln to bond and harden paint onto metal.

Please follow below for regular cleaning

Bucket of warm water with a soft clean cloth or sponge, clean metal in one direction, do not rub excessively. Ensure to pat dry as water drop will leave a mark on paint finish.

### ***Glass;***

Used is tempered for your safety; best results are to use table cloths, placemats & coasters to avoid scratching surface. Keep dust free, clean underside of glass with a soft clean cloth. Use of normal glass cleaning product is permissible but please rinse surrounding areas with clean water to avoid damage to paint on aluminium frame

### ***Fabric Information***

Fabrics used in outdoor product are not made of any special type of material; they do however use blends of common materials such as polyester, olefin & acrylic which perform best for intended purpose. These fabrics are not impervious to fading or mould, ensure cushions are always dry and put away when not in use.

### ***Fabric Maintenance***

It is important to keep fabric free of dust and or debris. Please vacuum regularly.

Spot cleaning warm water & soft soap solution, sponge onto affected area till clean rinse area with clean sponge, pat dry with a soft clean cloth.

Stubborn stains may be removed with fabric cleaner or if available steam cleaning is ok providing covers are left on filling and on gentle setting.

Note;

Do not use bleach or solvent based cleaning product. PH Neutral cleaning products only.

Machine wash with maximum 40 degrees Celsius or hand wash only.

Rinse thoroughly with clean water and air dry or tumble dryer on low temperature.

For ironing, use max temp 150 degrees Celsius. Avoid steam pressing

Do not dry clean.

## CARE AND MAINTENANCE

### ***Definition of Regular Cleaning;***

Numerous factors can influence the time frame for cleaning, depending area you live in, the weather, positioning of the product (fully protected, partial protection, fully exposed to the elements). You will need to monitor yourself to establish the cleaning requirement for your unique situation.

Areas with high salt content and or pollution will require the most frequent cleaning. To reduce some maintenance you should buy and use an outdoor cover to protect your furniture from the elements when not in use.

## SAFETY WARNINGS AND ADVICE

### *Notices and Advice*

Please be advised that products are limited in design for residential use only and are not suitable for commercial use.

Please be advised that materials used in your furniture are not impervious to neglect, acts of god, abuse, alcohol spills, improper use of chemicals such as bleach or any solvent based products.

Please be advised that heat sources such as barbeques, open fires, temporary/mobile/overhead heaters, poorly insulated candle holders, hot pots, pans, hot serving dishes can have adverse affects on your furniture.

Please be advised to use properly insulated placemats and coasters when serving hot or cold dishes and drinks.

Please be advised that fitting, bolts, nuts and or screws should be checked periodically to ensure they have not loosened over time. Remember do not overtighten.

Please be advised coverings and paint finishers are not animal proof. Claws can scratch covering & saliva is acidic and can damage finish.

Please be advised that continues exposure to the elements will reduce the life of finishes and fittings.

### DO NOT

- Place in close proximity to open flame or heaters.
- Leave spills or food, clean off immediately
- Pull loose thread, cut them instead.
- Sit or lean on arms or top of chairs
- Stand on chair or bench's
- Stand on table tops
- Place heavy objects on table tops
- Place objects such as pot plants as a display piece on tables recommend weight restriction for table top is 60kg across the table

### *Safety warnings*

- DO NOT:
- drop, drag, always move furniture with the help of another person to lift and place only
- over load seats designed for single adult use.
- use tables, chair, sofa as work bench's or substitute ladders.
- allow child to play under table.

**Warranty Detail:****1 Year Warranty**

A one (1) year warranty applies to product against any defect associated with faulty workmanship for a period of (1) year from date of purchase.

**Extended Warranty** of (1) year total of (2) years applies to aluminum frame & welds against any defect associated with faulty workmanship from date of purchase.

Furniture Solutions accepts no responsibility for defects caused by incorrect assembly, mishandling, acts of god, general wear & tear, stains from spills/vegetation, chipping/scratching, exposure to extreme heat/cold, mould/mildew, hardware corrosion, misuse of the products & defects caused by failure in duty of care for the product in accordance with the care instructions. Warranty only extends to original purchaser and is not transferable, except when given as a gift. Goods are limited in design for domestic use only, and are not suitable for commercial use.

**Duty of care:**

While every attempt is made to supply product using quality components there is always a need from consumer to help ensure a long life of use for product.

\*Proper use of item, only what it is designed to do. Designed for dining, not suitable for use as a workbench, substitute ladder or dance floor.

\*Regular maintenance and cleaning: Please consult your Instruction manual included in packaging for advice of cleaning

\*Protecting product from the harsh environment: Pollution, excessive moisture & heat.

To extend the life of your outdoor furniture we recommend the following furniture covers must/should be used on furniture which is used in areas not protected from elements.

Caution should be used when using oils, lotions & other chemicals such as chlorine not to spill on furniture.

**Instruction Manual** – Have been written to suit individual materials used in construction, please retain for future use for duty of care, assembly, parts & component sizing.

**Claim management:**

To make a warranty claim, customers can either contact the retailer where the purchase was made or Furniture Solutions on contact details below. Proof of purchase will be required before proceeding with any claim. In the case of product defects providing photos may be able to speed up processing of the claim. If missing parts please refer to assembly instructions for identification of said part and contact either of the above.

*“Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure”.*