Please retain as has important information for future use




ASSEMBLY INSTRUCTION

GOTEBORG

ITEM CODE:16GOT

Imported by Furniture Solutions (Aust) Pty Ltd 10-16 Daisy St, Revesby NSW, 2212, Australia www.furnituresolutions.com.au

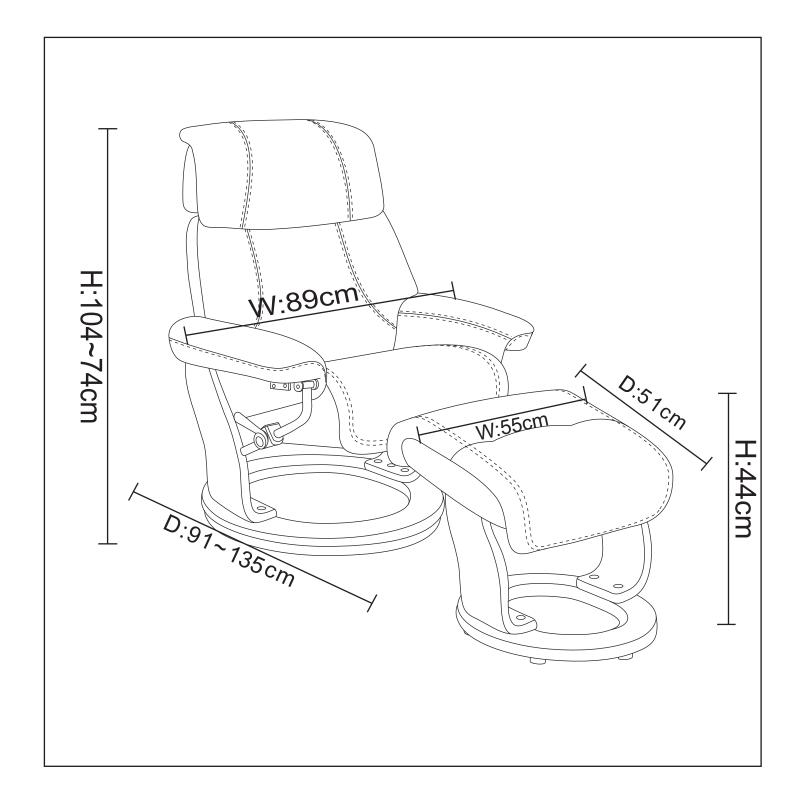


P1 ITEM CODE :16GOT

PRE-ASSEMBLY PREPARATION

Before you start:

- Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- **4.** Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- **6.** Do not over tighten the screws and bolts as this may damage the threads

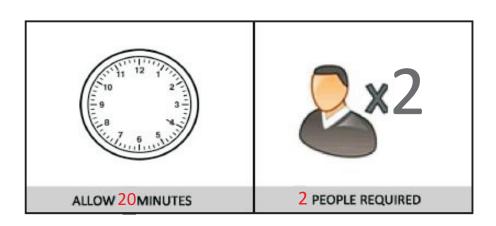

For any assistance for missing parts please refer to parts list on next page for identification. Contact point of purchase or Furniture Solutions (Aust) Pty Ltd with below details

Email: customerservice@furnituresolutions.com.au


Free-call Australia PH: 1300 794 188

Website: www.furnituresolutions.com.au

Note:

Please when contacting Furniture Solutions have purchase details and model name on hand

P2 ITEM CODE :16GOT

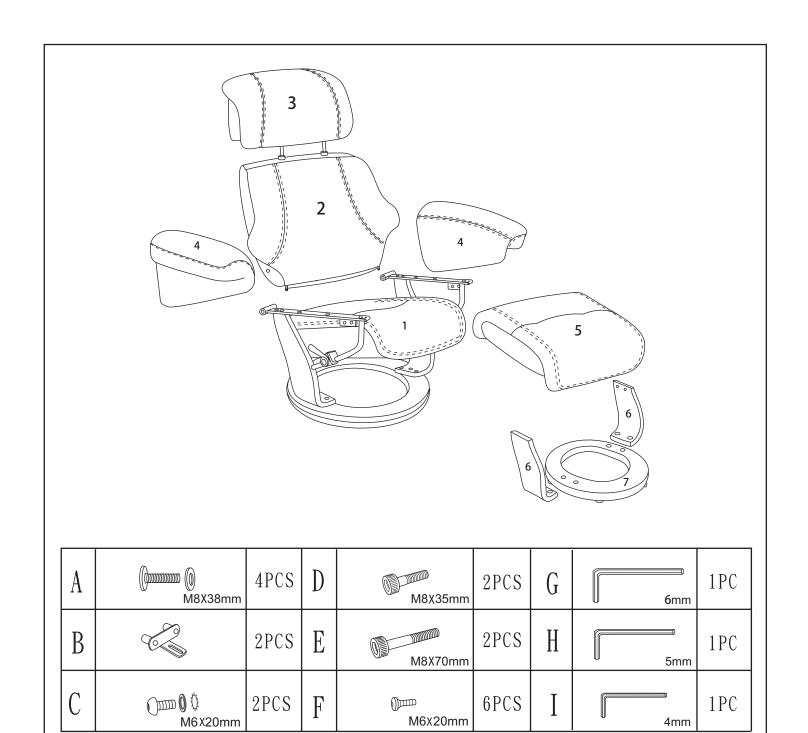


1.Chair Base With Cushion	2.Backrest Cushion	n 3.Head	lrest	4.Armrest Pads	
5.Footstool Cushion	6.Lw	6.Lwoods For Footstool		7.Footstool Base	


M6x20mm

4mm

To assemble Footstool: Identify parts required Hardware Bolt A with washer *4 + Part B Bracket*2 + bolt C with washer*2. Note do not over tighten any bolts, tighten only till firm.

Take footstool base (7) & LWood (6) line up holes, then with bolt & washer (A) insert thru hole then by hand turn bolt (A) 2-3 times to seat thread correctly, repeat for second bolt (A), once both seated tighten with tool (G). Repeat for next LWood. Note ensure LWoods are facing same direction. Next turn Footstool cushion (5) upside down as shown in diagram, insert bracket (B) into LWood as shown in diagram. Line up slots on bracket (B) with hole in Footstool Cushion (5) place bolt & washer (C) into hole and by hand turn 2-3 times to seat bolt (C) into thread correctly. Repeat for other side. Once both bolts (C) are seated correctly, take tool (H) and tighten till firm. Footstool complete. Note slots in bracket (B) allow for some adjustment to keep LWoods square.

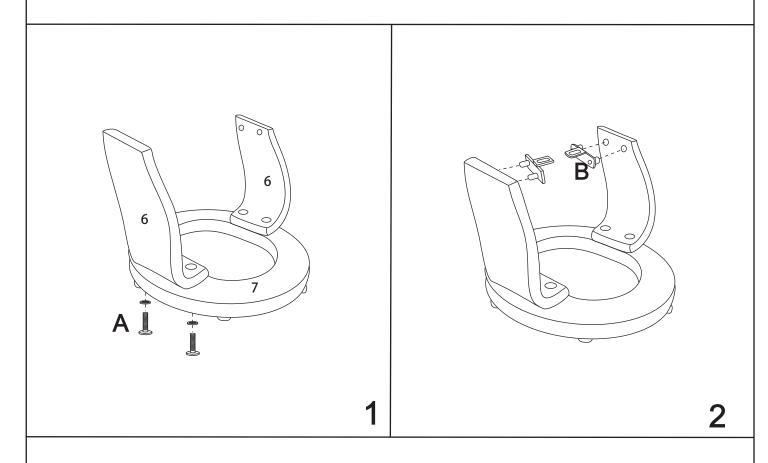


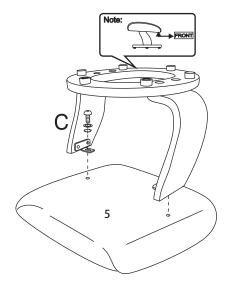


3


To Assemble Chair, attach backrest (2)

Take Chair base with cushion (1) place in upright position as shown in diagram, with the help of second person. Bring backrest (2) to chair base (1). Locate at base of backrest & back of seat black metal tubes that have holes, you may have to peel back leather covering to locate. Second person required to hold back rest level so bolts (D) can be inserted and seated into thread provided, then by hand seat both bolts (D) to ensure not to cross thread. Once both seated correctly tighten with tool (G) tighten till you feel resistance, do not over tighten. Now attach upper section of back rest to back of black bracket as shown in diagram, again second person required to keep backrest square while fitting bolts (E). By hand start bolt (E) thru hole in bracket into backrest (2) again you may have to peel back leather covering to locate threaded hole. Once both seated correctly take tool (G) and tighten bolts. Note these bolts (E) are used as a pivot point for backrest movement and do not need to be tighten flat against metal.

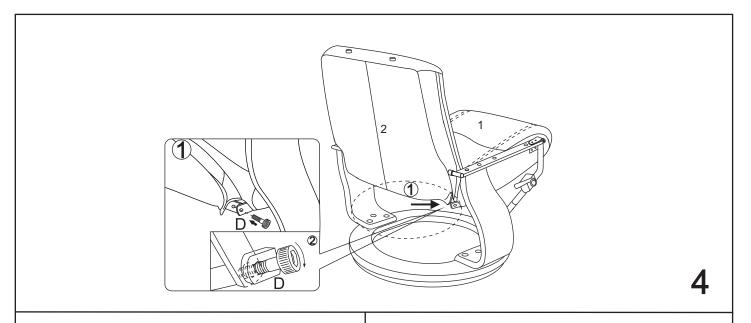

To fit headrest (3) as indicated in diagram at top of backrest (2) you will see 2 black plastic sockets; one of these has a button on the side similar to a car seat. Line up metal prongs with holes, then press the button and slide prongs into black sockets.

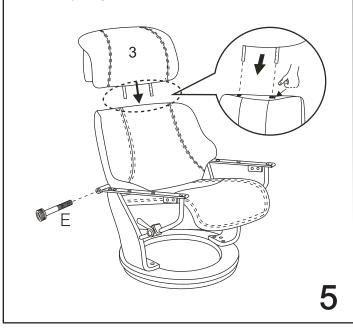

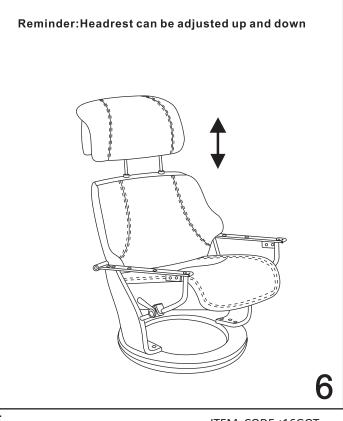


P5 ITEM CODE :16GOT

To assemble armrest pads:

Note feature with this chair is an arm height adjustment which works on a ratchet system, pre-fitted inside LWood of chair.


At front of bracket as shown in diagram there is a hinge system fold forward to expose holes in hinge plate. Take armrest pad line up holes on both hinge and armrest pad (4) and by hand insert bolt (F) and turn 2-3 times to seat thread properly, repeat for other bolt (F) once seated take tool (H) and tighten till firm, do not over tighten. Locate ratchet system inside LWood of chair Extend to give you room to fit bolt (F) repeat fitting instruction above.

Special note on ratchet system they need to be fully extended before they can be unextened.

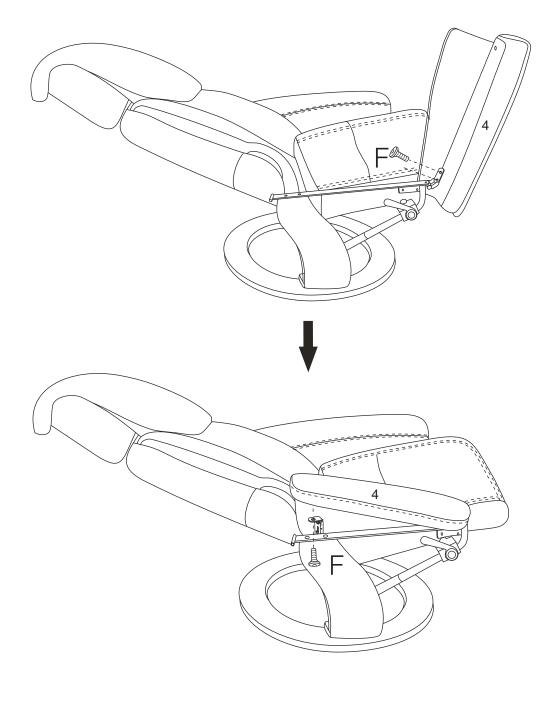

Reminder: To adjust arms down, pull all the way up then push down.


7

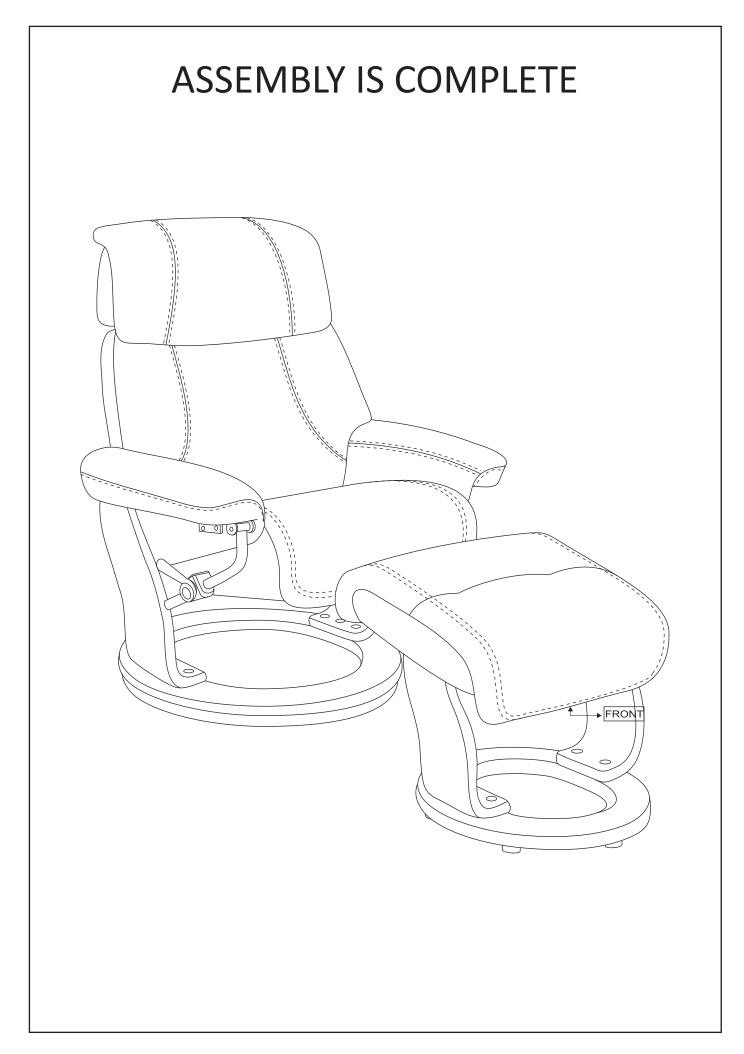


P7

Function Instruction

Reclining function

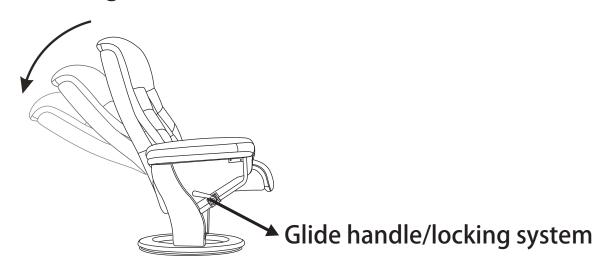


Recliner Position Control

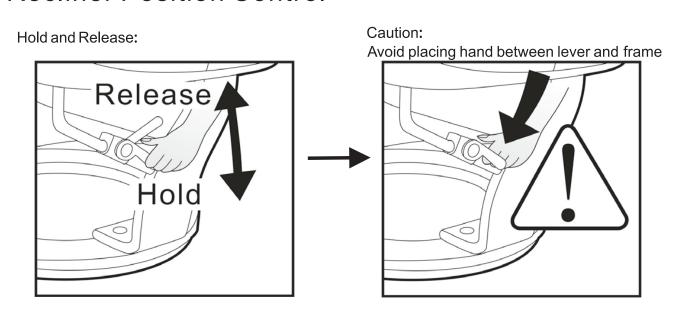

Armrest

Reminder: To adjust arms down, pull all the way up then push down.

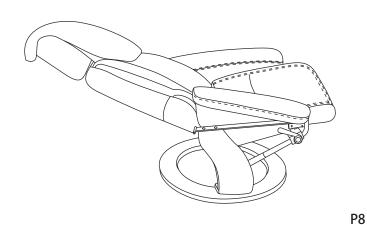


Headrest




3 ITEM CODE :16GOT

Customise Your Recliner Action


Steps are shown as below

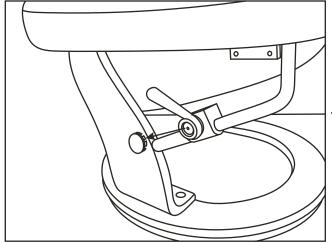

Take off plastic cover from handle.

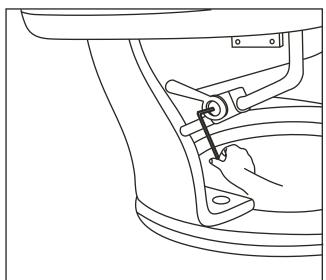

To adjust tension on glide action. With 4mm Allen Key adjust clockwise to tighten grip and anti clockwise to loosen. Note do not over tighten as handle will not lock properly.

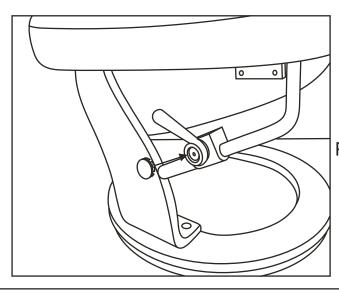

Put plastic cover back to handle bar.

P9 ITEM CODE :16GOT

Care Instruction for leather covering

Regular Care:

Vacuum & or brush away dust & grit as necessary, wipe with a soft clean dye fast cloth. Wipe excess liquid up immediately with a absorbent cloth or sponge.

Periodic Cleaning:

Every 3-4 months remove excess body oils with a leather cleaner, followed by application of leather protector. Follow direction as recommended. Frequency of periodic care depends on usage.

Notes:

Accumulation of perspiration and body oils on arm pads, headrest etc. may damage your Leather in these areas and will require more frequent cleaning.

Leather is not resistant to animals. Claws scratch covering, saliva is acidic and can damage finish.

Alcohol, hair spray, gel mousse, perfume, deodorants, some medication and dye penetration from cloths can have adverse effects on surface of leather.

Care Instruction for chair & mechanism

Every 3-4 months lay chair over on its back and wipe and or vacuum action inside chair to remove excess dust and fluff, pay special attention to swivel action at base of chair, ensure all metal components are clean and free of impediments.

Ensure all bolts are firm refer to assembly instructions for location.

Important safety instructions:

Do not sit on arms

Do not stand on chair

Do not lean on back of chair

Do not drag chair always lift with the help of another person

Do not allow items to be entangled with mechanism IE: Blankets, pillows & clothing

Ensure swivel mechanism on chair base is clear of loose threads, long carpet fibre's or simular items

P10 ITEM CODE :16GOT